


# Universal Waste - K16

(all baths with overflow)

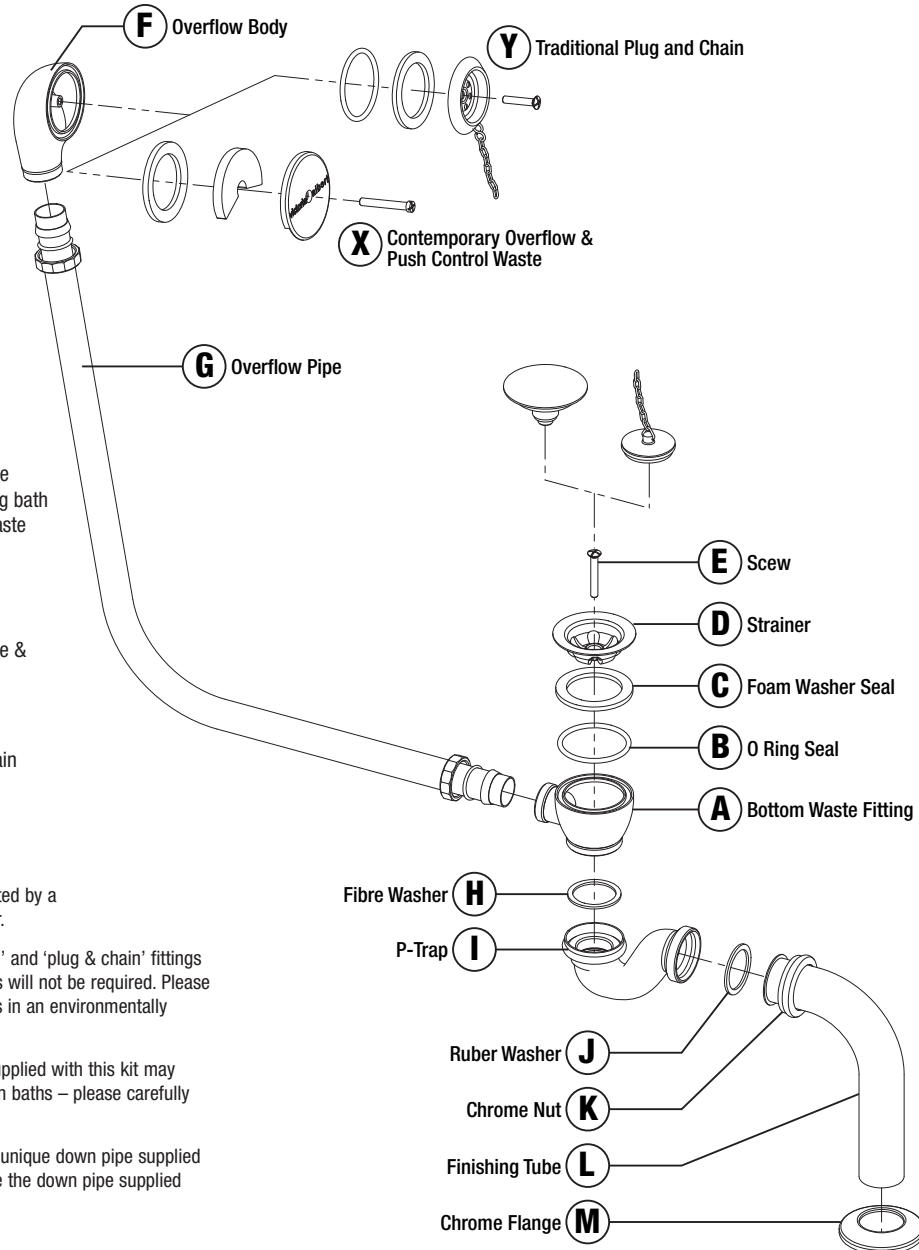

This innovative kit contains all the necessary components to complete the installation of your freestanding bath with a choice of two distinctive waste styles:

- **Contemporary**  
Featuring a push control waste & engraved overflow face plate
- **Traditional**  
Featuring a classic plug & chain waste and overflow

**Caution:**

- This product should only be fitted by a professional plumber / installer.
- By including both 'push control' and 'plug & chain' fittings in this pack, some components will not be required. Please dispose of unused components in an environmentally responsible way.
- The L-shaped overflow pipe supplied with this kit may require cutting down for certain baths – please carefully measure and cut as required.
- Roxburgh only: Please use the unique down pipe supplied with the Roxburgh - do not use the down pipe supplied with this universal kit.

**Method:**


1. Locate bottom waste fitting 'a' with o-ring 'b' under the bath and fix with foam washer 'c', strainer 'd' and screw 'e' from inside the bath.
2. Locate overflow body 'f' with shaped rubber wash or o-ring on outside of bath and fix with choice of modern or traditional overflow face plate, washers and screw ('x' or 'y').
3. Offer up overflow pipe 'g' from waste fitting to overflow body. Check height and reach and cut to size if necessary.
4. Add compression nut, polywasher and rubber compression washer to both ends of the overflow pipe 'g'.
5. Undo overflow face plate ('x' or 'y') and remove overflow body 'f' from the bath. Attach overflow body to the overflow pipe and connect complete assembly to waste fitting 'a'. Reconnect overflow face plate to overflow body and tighten all connections.
6. If using modern push control option ('x'), screw central plug into strainer 'd' until finger tight.
7. Insert fibre washer 'h' between waste body and p-trap assembly 'i'. Screw in assembly until tight.
8. For the ultimate finish, we include a 90-degree decorative waste pipe 'l' and flange 'm'. To use, position rubber washer 'j' onto the captive end of the pipe and use nut 'k' to tighten onto p-trap.

**Note:** for product specifications please see over

# Universal Waste - K16

(all baths with overflow)

**NB. Overflow pipe requires cutting down to fit certain models**

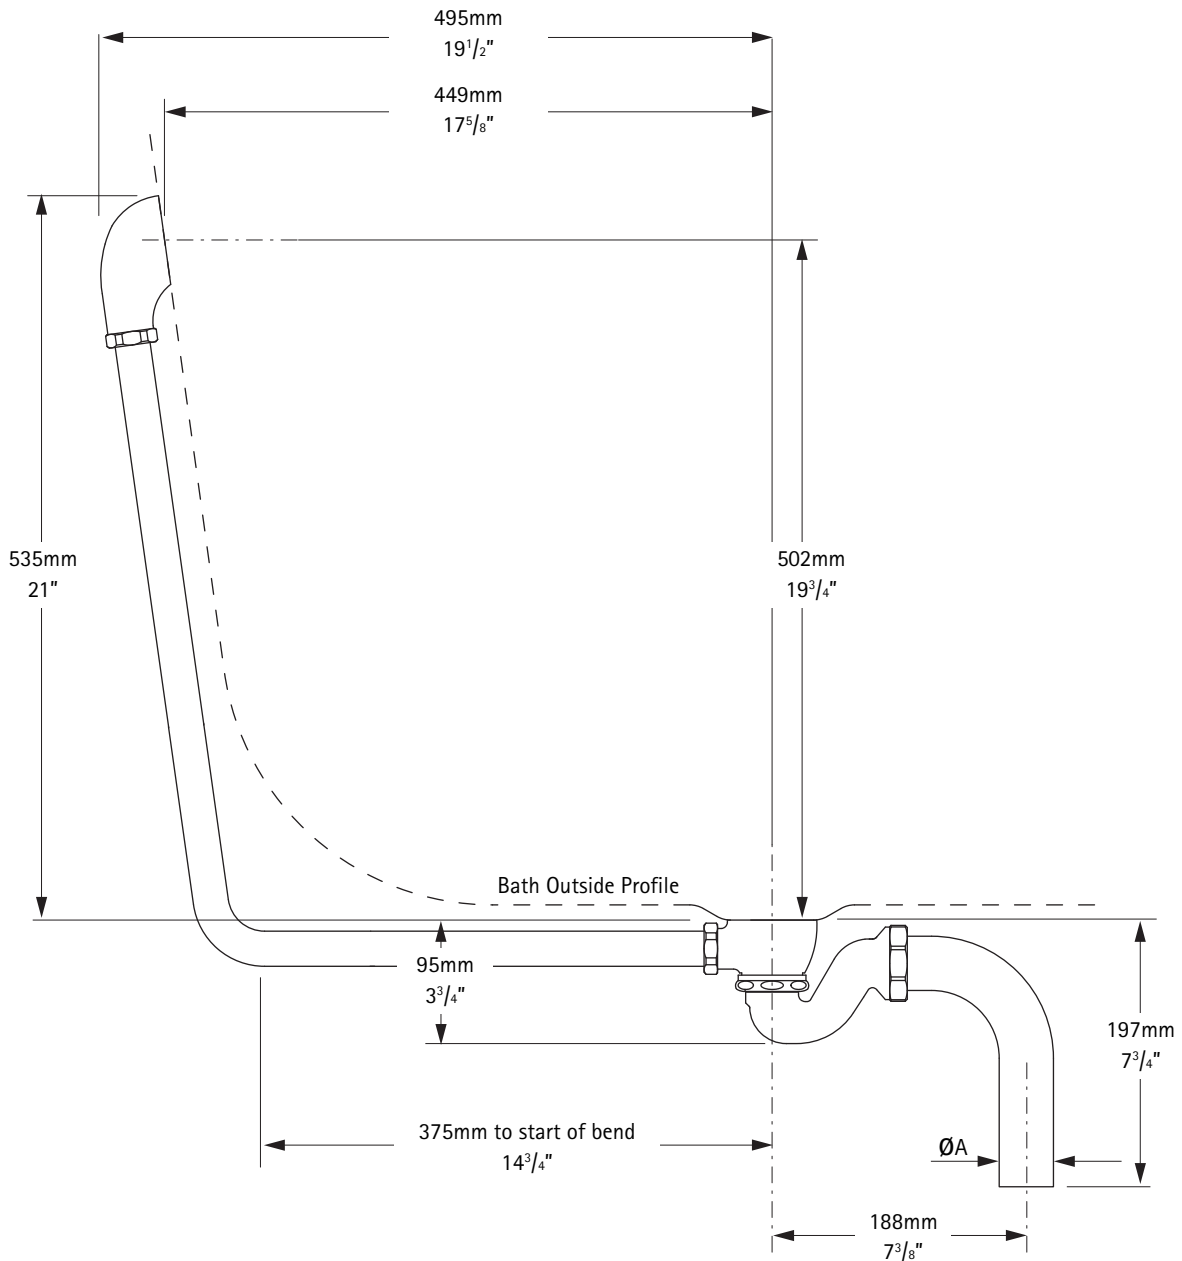

**External diameter of the exposed waste exit pipe (A) is 38mm**